

**1098**
**tenazas de ferrallista**
**ISO 9242 DIN 5242**

|  | art.     | L<br>~ | L1<br>mm |
|---------------------------------------------------------------------------------|----------|--------|----------|
| <b>010980190</b>                                                                | 1098 190 | 190    | 12       |
| <b>010980220</b>                                                                | 1098 220 | 220    | 13       |
| <b>010980250</b>                                                                | 1098 250 | 250    | 15       |
| <b>010980280</b>                                                                | 1098 280 | 280    | 18       |

